

# Instructions for PTTR series Pressure Transducers

**Caution:**

***Disconnect the negative battery cable prior to any installation***

Products designed and

manufactured under ISO 9001:2008 quality standard.

**PIL057**

<b>PTTR Series Pressure Transducers</b>		
<b>Pin No.</b>	<b>Wire Colour</b>	<b>Connect To</b>
Pin 1	Black	Ground
Pin 2	Green	+12volts
Pin 4	Green/Orange	Sender output - connect to gauge signal input
Pin 3	----	Not Used